

Additional Manual for Housing Model A-SWD5V, VX and Z

This is additional manual. Read Instruction Manual.

3 Standard Accessories are provided with housing.

- 1) 3/4" Plastic Bushing 1pc.
- 2) Rubber Gasket for M4 Screws 4pcs.
- 3) Round Gasket for Housing Top 1pc.



* Approx. Weight of Housing Unit without Camera are as follows:

The unit must be properly and securely mounted to supporting structure capable of sustaining the weight of unit.

A-SWD5V	2.8kg (6.2 lbs)
A-SWD5VX	2.3kg (5.1 lbs)
A-SWD5Z	1.4kg (3.1 lbs)

To install Housing, use M4 screws x 4 pcs. (Dia of Hole is 4.5mm)

Depending upon environment, use bigger screws by making 4 holes (dia 4.5mm) bigger with drill.

1. Silicon (Not provided)

Round shape gasket is provided. However, it is not good enough for the place where rain hits housing unit directly.

Use "Silicon"(not provided) around:



(Inside of Housing)

(Side 3/4" Hole)


(Top Screw Head & 3/4" Holes)

When you feel danger of entry of water, use Silicon on both inside and outside of Housing Unit. Standard Gaskets provided are supportive material which is not perfect enough.

2. Make Hole with Drill on drill guide(Model A-SWD5Z only)

There is no holes open on top of Housing Model A-SWD5Z. Make Hole wth Drill on Drill Guide.

Note: Use Fireproof Putty (not provided) to bridge the gap between cable and hole to prevent entry of bugs, dust and moisture.

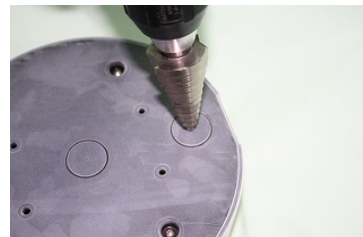

3. Optional 24VAC 25W or 12VDC 25W Blower/Heater



Just tighten this M4 screw to install Blower/Heater.

Note: In case of 12VDC Blower Heater, pay attention to Polarity. Red is 12VDC+. Black is GND.

4. Installation of Optional Wall Bracket A-SWD5ZWB

Read Instruction manual provided.

5. Installation of Camera

Read each Camera's Instruction Manual or additional manual provided with housing unit if any. Turn off LED Power Lamp of Camera based on Camera's instruction Manual in order to prevent reflection.